

BPS5U - Remote control - Manual



Remote receiver Board - Model : KRM4

Antenna End Point should outside the box




Channel Setup

This Remoter receiver only connect with BPS5U Power supply, do not connect with other Power supplier

Default is Channel "0"

Channel "1"

Remoter and Receiver must set in same channel for connection

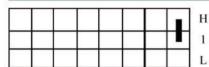

Channel "2"
Remoter and Receiver must set in same channel for connection





Remote Model : KM4



Channel "1" setup Remote Connect H and 1 in a same point



Channel "1" setup receiver Connect H and 1 in a same point

Locktronix

Contact: Mr Jeffrey Yuen Email: jeff@locktronixusa.com

Web site: http://www.locktronixusa.com