Next Generation US Technology

Jackwell Group

BPS5U - Remote control - Manual



Remote receiver Board - Model : KRM4

Antenna End Point should outside the box



Channel Setup

This Remoter receiver only connect with BPS5U Power supply, do not connect with other Power supplier

 
Default is Channel "0"

Channel "1"

Remoter and Receiver must set in same channel for connection

				Н
				1
				L

Channel "2" Remoter and Receiver must set in same channel for connection





Remote Model : RM4



Channel "1" setup Remote Connect H and 1 in a same point



Channel "1" setup receiver Connect H and 1 in a same point