



Jumper  
Select Open  
Mode



No connect  
Press any key  
ON then OFF



connect 1&2  
Press A ON  
Press C-D OFF



connect 2&3  
Press A ON  
Press A OFF

DC12V -  
Input

DC12V +  
Input

A Relay  
NC

A Relay  
GND

A Relay  
NO

B Relay  
NC

B Relay  
GND

B Relay  
NO

Locktronix  
RM4 / IM4  
Manual  
Remote &  
Controller

RELAY

RELAY

RELAY

RELAY

Push to add Remote



LED Indication Light

D Relay  
NC

D Relay  
GND

D Relay  
NC

C Relay  
NO

C Relay  
GND

C Relay  
NC